

# Release Notes

---

**Product:** SNC<sup>®</sup> 4000 Firmware v. 4.50.03

**Date:** July 2005

## Contents

---

Page	Topic
1	<a href="#">Purpose of this Release</a>
1	<a href="#">New Features</a>
1	<a href="#">Resolved Issues</a>
2	<a href="#">Documentation</a>

## Purpose of this Release

---

This release extends the capabilities of the Storage Networking Controller (SNC) 4000. These release notes include a list of issues that are resolved by this release of the SNC 4000 firmware. Visit [www.adic.com](http://www.adic.com) for additional information about the SNC 4000 and previous firmware releases. For a complete matrix of firmware compatibility, refer to the library release notes.

## New Features

---

This release provides new firmware, v. 4.50.03, for the SNC 4000.

## Resolved Issues

---

Problems that have been resolved in this release of Firmware v. 4.50.03 are as follows:

Change Request Number	Description
<b>4.50.03</b>	
35664	Added the ability to reset a specified SCSI bus from the CLI and SNMP.
36216	CFL events for failed medium changer are not available if the changer does not respond when SCSI channel is rescanned.
39534	Added serial numbers of targets in the mapShowDatabase output.



<b>Change Request Number</b>	<b>Description</b>
39587	With SOIP a "No Device 6.14.21" message is displayed on the SNC when an inquiry command is sent to an invalid device.
40466	CFL - every playback allocates new copy buffer and does not free if playback is interrupted.
40488	Updated the SCSI command timeout values to conform with IBM LTO-X specifications.
42000	Drive dump files have bytes swapped and were unreadable by the IBM Town Tool.
42645	SC24 with LTO-2 SCSI firmware 53Y2 fails cleaning jobs running CommVault Galaxy 5.9.
42933	SCSI device information does not show up in SNC Manager immediately after SNC restart firmware 4.50.03.

## Documentation

---

These related documents are currently available for the SNC 4000:

<b>Document Number</b>	<b>Document Title</b>
6-00676-03	SNC Firmware 4.4x User's Guide
62-2308-03	SNC 4000 User's Guide