



Download Tape Drive Drivers for Scalar Tape Libraries


To ensure you have the latest tape drive driver available, this document provides instructions on downloading tape drive drivers for the Scalar i3, Scalar i6, Scalar i500, Scalar i6000, and SuperLoader 3 tape libraries from related partner Web sites.

 **Caution:** There may be legal qualifications for downloading this code. Because these links go directly to the code download and bypass any such links, Quantum is not responsible for the information downloaded to your site.

IBM LTO Tape Drive Drivers

1. From a Web browser go to the **Scalar Library Drivers** page on www.quantum.com. This page can be accessed at: https://www.quantum.com/en/service-support/resources/other-pages/scalar_drivers/
2. Under **Tape Drive Drivers > Advanced Path Failover Drivers for IBM LTO Drives**, select **Download** next to the appropriate driver (Linux, AIX, Windows).
3. Review and accept the **Export Regulation and End User License Agreement (EULA)**.
4. Extract the files and follow the installation instructions.
5. To Install the Windows IBM driver, extract the files into a folder.

Important! Open a Windows Command Prompt window with **Run as administrator**.

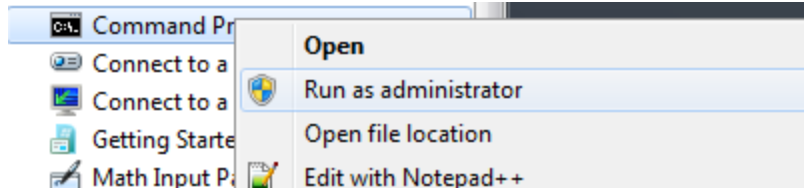

Example

Select **Start > All Programs > Accessories**, and then right-click on the Command Prompt icon.

6. Navigate to the folder to which you extracted the files.

Installing Non-Exclusive (For All non-Tivoli Installs)

If you are *not* running IBM Tivoli Storage Manager, run the following command to install the tape device driver:

```
install_nonexclusive.exe -t
```

(the -t parameter tells the command to install only the tape driver)

Installing Exclusive (For Tivoli installs)

If you are running IBM Tivoli Storage Manager, run the following command to install the tape device driver:

```
install_exclusive.exe
```

Uninstalling the IBM Driver

If you need to uninstall the IBM driver, run **uninst.exe** from the same folder. A reboot is required after running **uninst.exe**.

HP LTO Tape Drive Drivers


1. From a Web browser go to the **Scalar Library Drivers** page on www.quantum.com. This page can be accessed at: https://www.quantum.com/en/service-support/resources/other-pages/scalar_drivers/
2. Under **Tape Drive Drivers > Advanced Path Failover Drivers for HP LTO Drives**, select **Download** next to the appropriate driver.
3. Review and accept the **Export Regulation and End User License Agreement (EULA)**.
4. Extract the files and follow the installation instructions.

SuperLoader 3

1. Determine the embedded tape drive in the SuperLoader 3 by using one of the following options:
 - a. View the LCD screen of a powered-up unit. The LCD screen will indicate the type of LTO tape drive installed.



- b. View the **Device Manager** in your operating system (**Computer Management > Device Manager > Other Devices**).

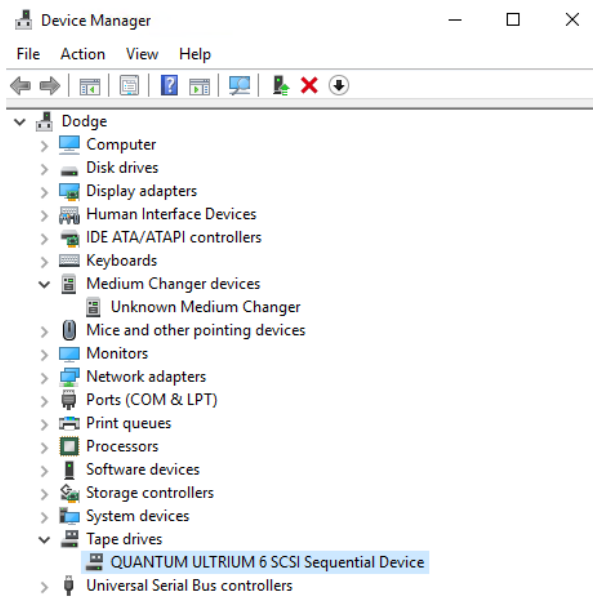

2. After the tape drive is determined, do the following:
 - If you have an IBM tape drive installed, go to [IBM LTO Tape Drive Drivers on page 1](#) in this document.
 - If you have a Quantum tape drive installed, obtain the Quantum tape drive driver from Quantum.com by following these steps:
 - a. Go to <http://www.quantum.com>
 - b. Select the **Support** menu drop-down, and select **Download Software, Firmware, Drivers**.
 - c. Select **SuperLoader3** from the products list.

- d. Select the **Drivers** tab.
- e. Click the **Download** button next to the appropriate tape driver.
- f. Review and accept the **Export Regulation and End User License Agreement (EULA)**.
The tape driver will begin downloading.
- g. Extract the files and follow the installation instructions.